

Fuses / Disconnectors


FH-01/3P

FH-00/3P
FH-01 (NH1 Type)

FH-00 (NH00 Type)

Model	Description	Box / Carton
FH-00/3P	3 Pole Fuse Holder (NH00)	1 / 18
FH-01/3P	3 Pole Fuse Holder (NH1)	1 / 6

Model	Description	Box / Carton
FH-00/63A	63A Fuse (NH00 Type)	3 / 100
FH-00/80A	80A Fuse (NH00 Type)	3 / 100
FH-00/100A	100A Fuse (NH00 Type)	3 / 100
FH-00/125A	125A Fuse (NH00 Type)	3 / 100
FH-00/160A	160A Fuse (NH00 Type)	3 / 100

FH-1038-2P


Model	Description	Box Qty.
FH-1038-2P	2 Pole Fuse Holder	6

Model	Description	Box / Carton
FH-01/63A	63A Fuse (NH1 Type)	2 / 48
FH-01/80A	80A Fuse (NH1 Type)	2 / 48
FH-01/100A	100A Fuse (NH1 Type)	2 / 48
FH-01/160A	160A Fuse (NH1 Type)	2 / 48
FH-01/200A	200A Fuse (NH1 Type)	2 / 48
FH-01/250A	250A Fuse (NT1 Type)	2 / 48

FH-10A

 DC1000V
gPV Solar

FH-15A

Model	Description	Box Qty.
FH-10A	10A Fuse (10x 38mm)	20
FH-15A	15A Fuse (10x 38mm)	20

FH00 / FH01 Series

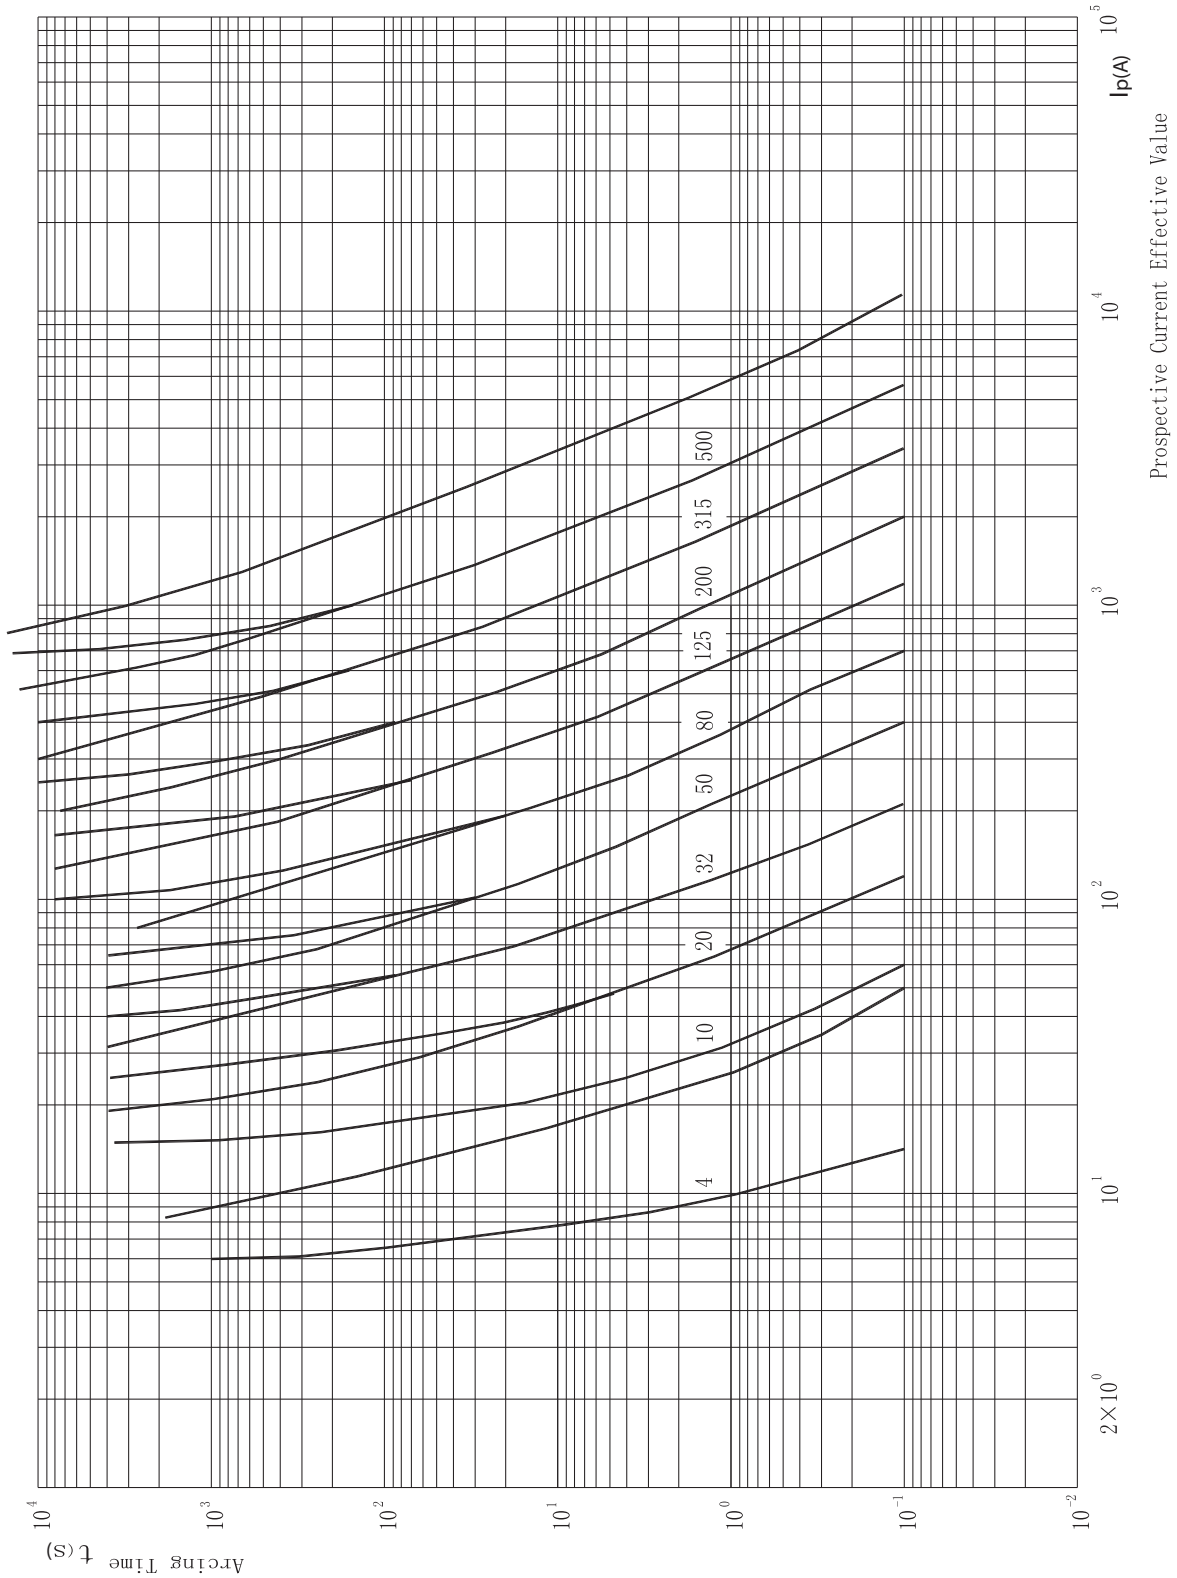 


Figure 2 Current Time Zone

FH00 / FH01 Series

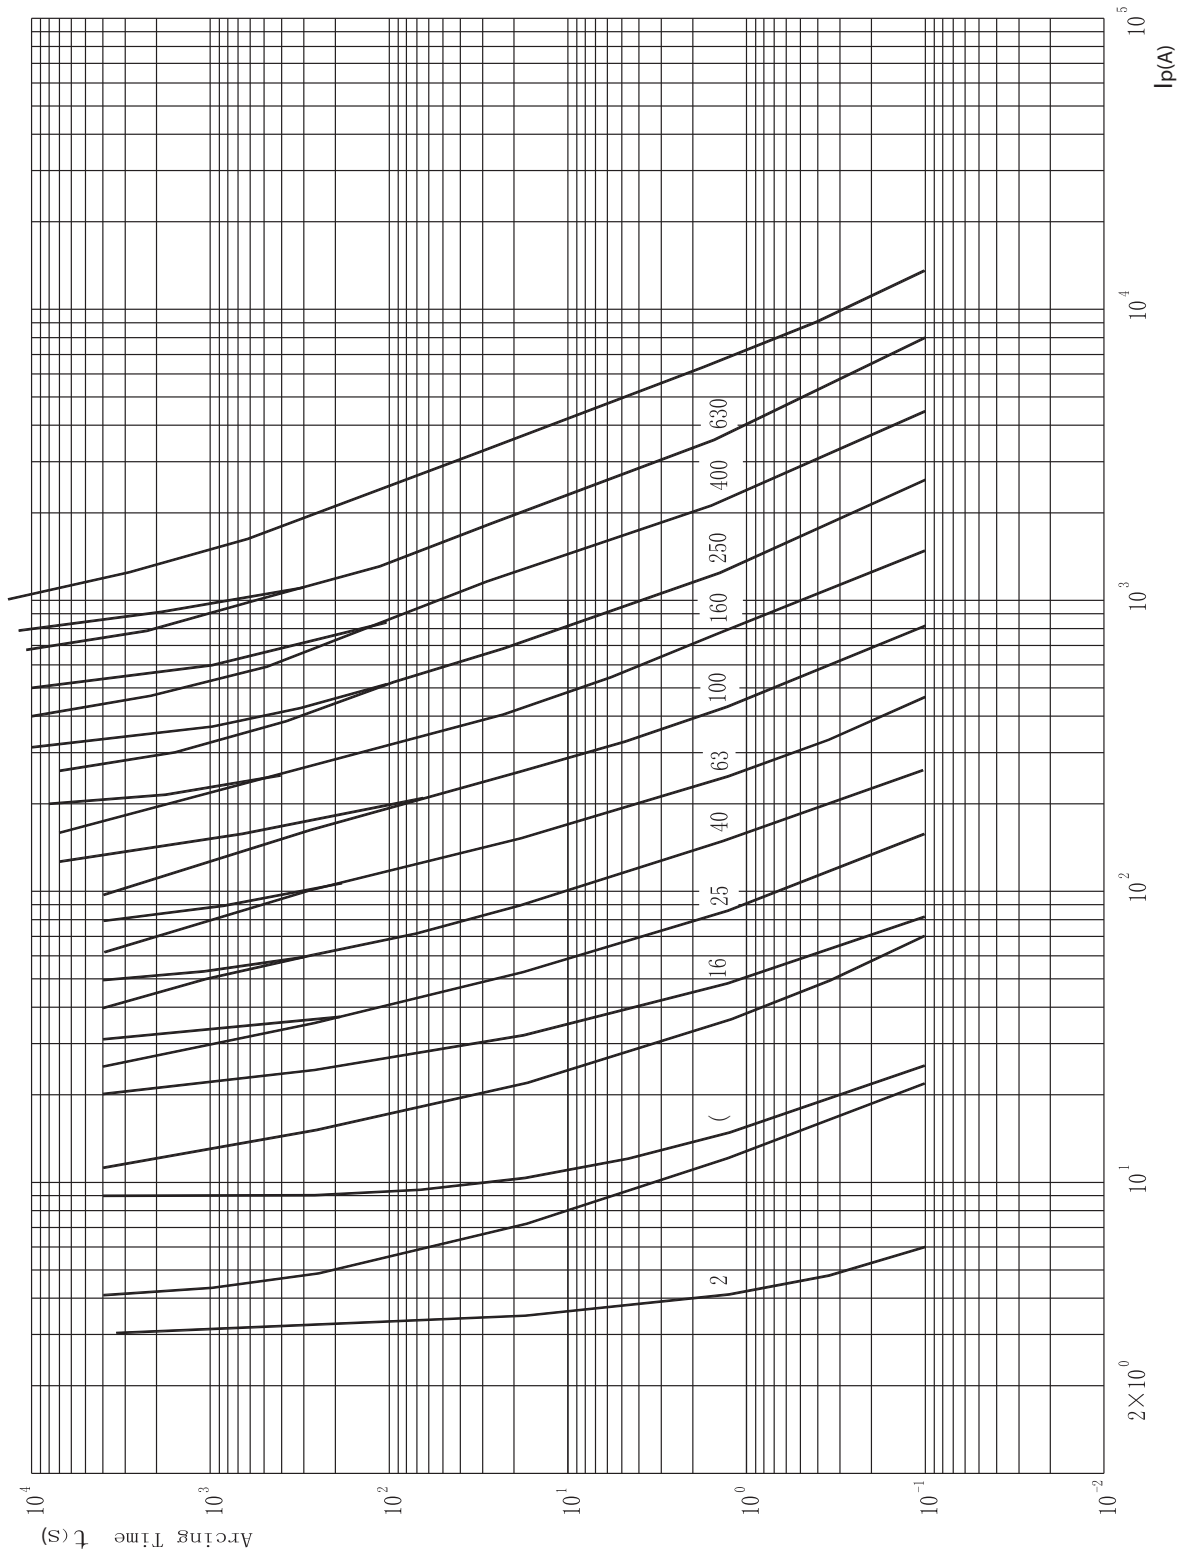 


Figure 1 Current Time Zone

FH00 / FH01 Series

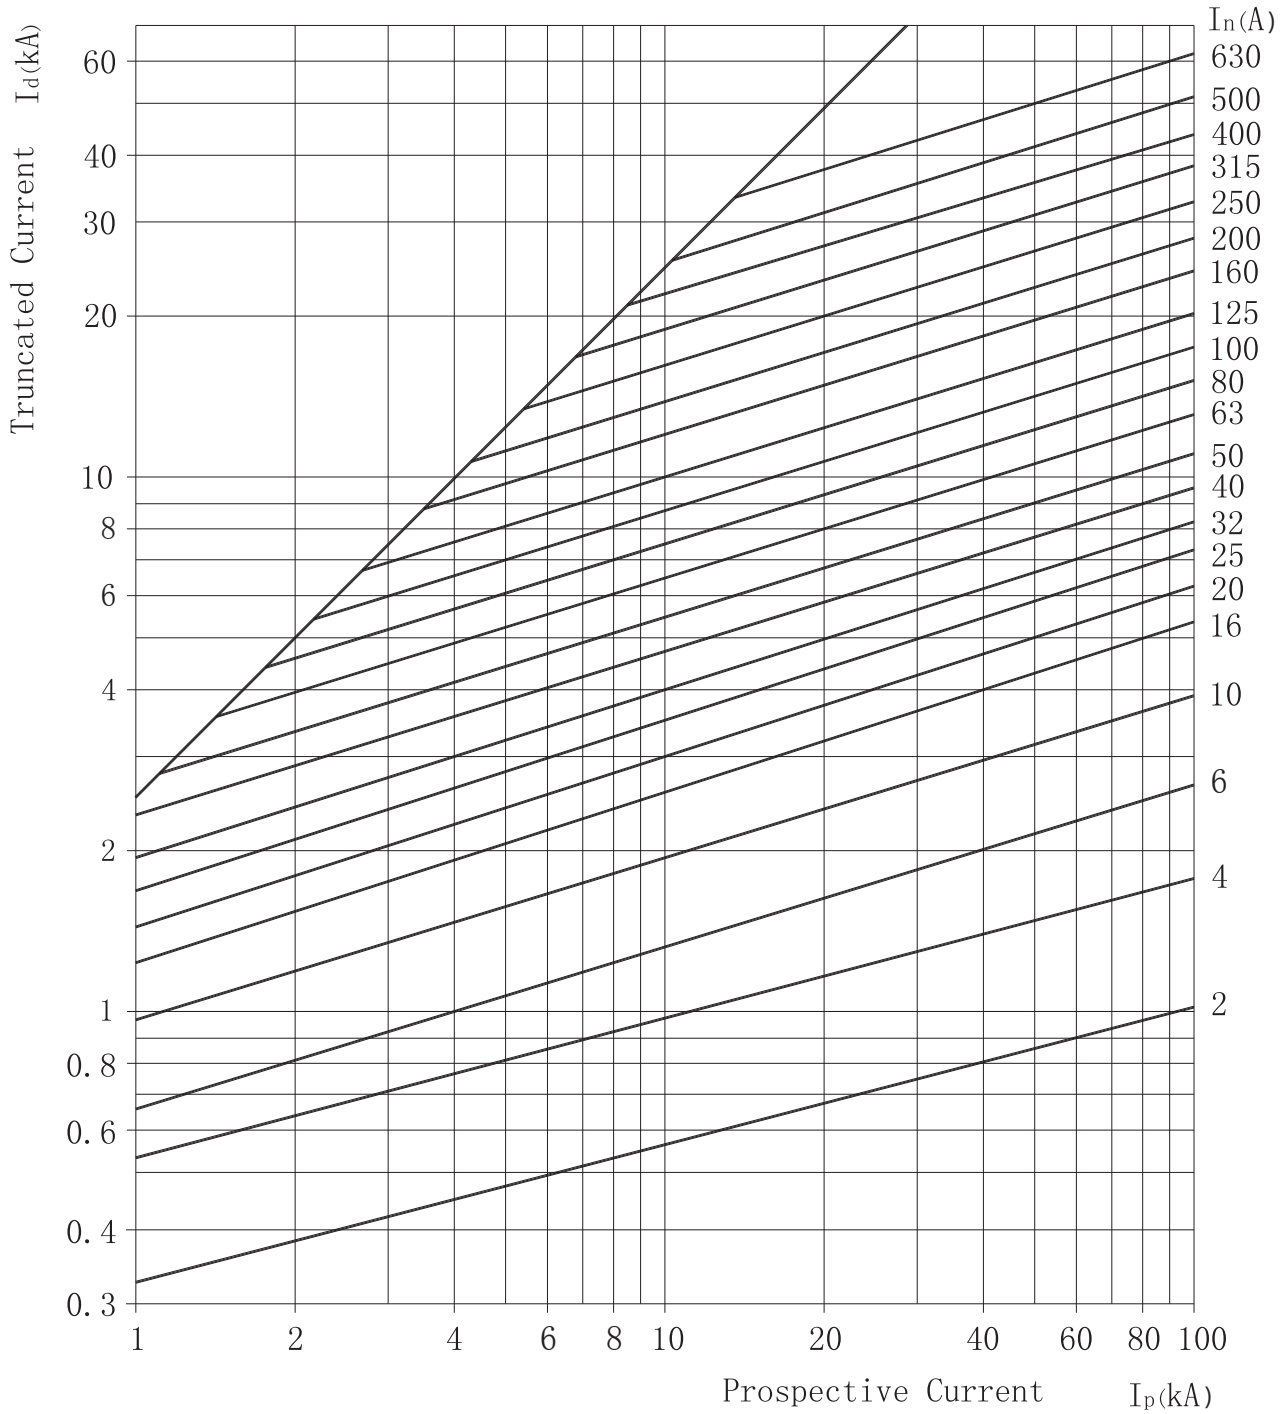 


Figure 3 Current Time Zone